

INK & SPINDLE

INSTALLATION GUIDE

ROLLER BLINDS

Thank you for purchasing an Ink & Spindle Roller blind! We hope it looks lovely in your home.

Please find below a simple guide for installing the blind yourself, please don't hesitate to contact us if you need any further assistance.



Hardware

Your Roman Blind will be supplied with everything you need for self installation.

- 1) Bracket screws (two pairs)
- 2) Mounting Bracket - chain side
- 3) Mounting Bracket - non chain side
- 4) Screws for chain tensioner
- 5) Chain tensioner
- 6) Chain stoppers

INK & SPINDLE



Installing the brackets

Each roller blind comes with two mounting brackets which are slightly different. The one pictured here is installed on the same side as the Roller Blind chain. In this case the chain is on the left.

The position of your bracket will correspond with the measurements you originally supplied to us. Usually one of the following:

- 1) **Arc mounted:** position your bracket flush with the top corner of your architrave.
- 2) **Recess mounted, top:** position your bracket so that it is fixed to the ceiling of your recess. Ensure that there is sufficient space behind the brackets so that the blind does not rub against the glass.
- 3) **Recess mounted, face (pictured):** position your bracket in the top corner of the recess. Ensure that there is sufficient space above the bracket so that the blind does not rub against the top of the recess.

Once positioned mark the holes with a pencil, then pre-drill the holes to prevent any splitting of the timber. Screw the bracket into place.



Repeat with the second mounting bracket, making sure the two brackets are level with one another.

NOTE: Unless otherwise discussed, your blind will always be supplied with a “normal” / “back roll” orientation, with the fabric closest to the window and the roll at the front. DO NOT change the direction of the roll unless previously discussed with us. “Reverse Roll” / “front roll” blinds risk fading / UV damage to the face fabric.

INK & SPINDLE



Clipping the blind into place

First orient your blind so that the cover of the chain mechanism is sitting at the top, rather than the side or bottom. The chain should be able to hang down unobscured by the cover.

Whilst supporting the blind, fit the chain end of the blind onto the protruding pin of the bracket.



At the other end you will notice that the bracket has a small opening at the front, through which you can slide the pin at the other end of the blind into position. It should make a satisfying click sound when correctly in place.

If the pin on your blind is not protruding sufficiently you can adjust this by turning the clear winder at the end of the blind. This pin is extendable up to 10mm, which offers a small margin for error if the brackets are slightly too far apart.

To remove blind from bracket simply turn clear winder in an anti-clockwise direction to retract the pin and lift the blind out of the bracket.

INK & SPINDLE



Installing the Chain Tensioner

ACCORDING TO AUSTRALIAN LAW: To avoid creating a possible strangulation hazard for children, your roller blind must be installed in such a way that a loose cord or chain cannot form a loop of 220mm or longer at a height at or less than 1600mm above floor level. It must also remain firmly in place when subjected to force, and you must ensure that a child cannot remove the chain from the tensioner.

Your chain tensioner can be mounted in any secure position that does not obstruct the movement of the blind.

First locate the base of the chain loop, and position the back of the chain tensioner such that the loop is held firmly but not too tight - it should still be able to move smoothly. Mark the screw holes with a pencil, then pre-drill the holes before screwing into place.



Replace the cover of the chain tensioner and screw into place.

Installing the Chain stoppers (optional)

The supplied chain stoppers are designed to stop the blind from being lowered or raised too far.

When the blind is in a comfortable down position, clip one chain stopper at the top of the front chain using pliers.

When the blind is in a comfortable top position you can clip the other chain stopper onto the back chain at the top.